


HOW TO USE YOUR WOOL WINDER

1. SET UP THE YARN GUIDE



Using the slot

- On the left side for a right-handed person
 - On the right side for a left-handed person,
- Insert the yarn guide as far as possible

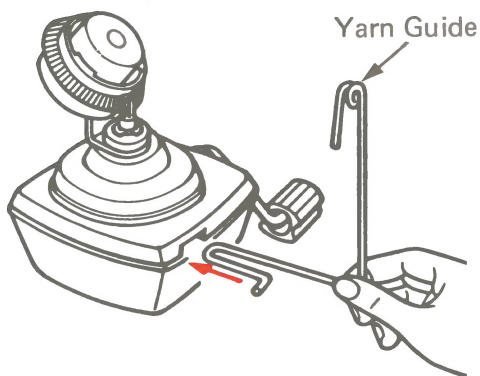



2. FIT THE BOBBIN ON THE BOBBIN HOLDER

Holding the Bobbin Holder in the Left Hand, fit the Bobbin on to the Bobbin Holder and turn the Bobbin to the Right as far as possible

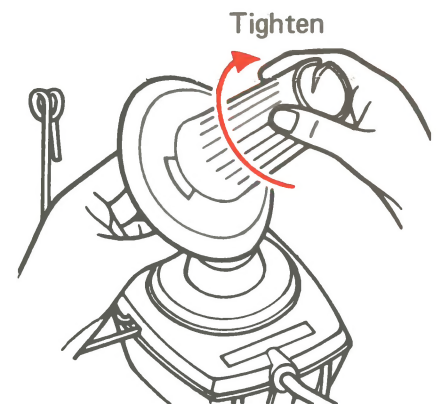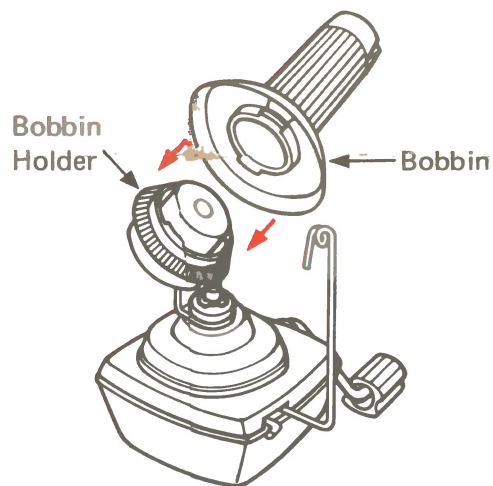

3. CLAMP THE WOOLWINDER TO THE TABLE


Turn the Holding Clamp to the Bottom as shown. Fit on the table and secure by turning the Wing Nut to the Right.

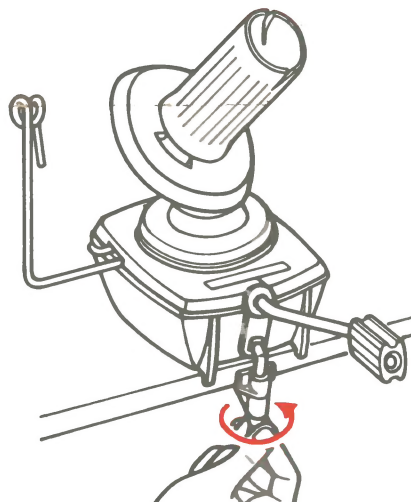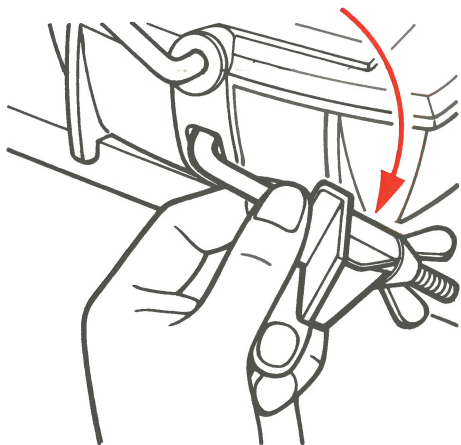

4. WINDING THE WOOL


Thread the Wool through the Yarn Guide and hook the end of the Wool in the gap in the Bobbin.

Then, holding the Wool to give it a slight tension, turn the Handle to the Right.

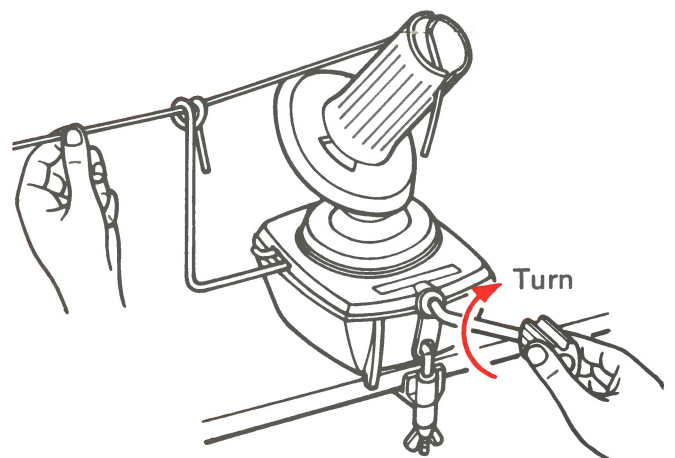

5. AFTER WINDING UP THE WOOL


Pull out the beginning of the Wool and take the Ball off the Bobbin. For Cotton Yarn or Synthetic Wool — See Item 6.2

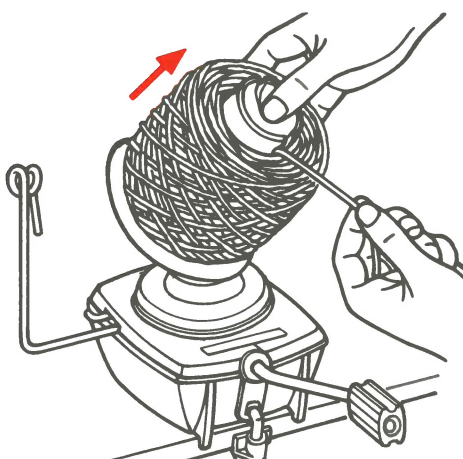

6. KNITTING

① For Wool

Take up from the inside of the Ball.

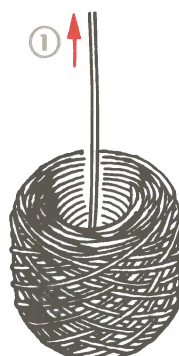

② For Cotton Yarn or Synthetic Wool

Do not take the Ball off the Bobbin — remove the Bobbin from the Bobbin Holder and use the Wool from the outside of the Ball.

